




Светодиодный прожектор BR-FL03B-Slim-200W White

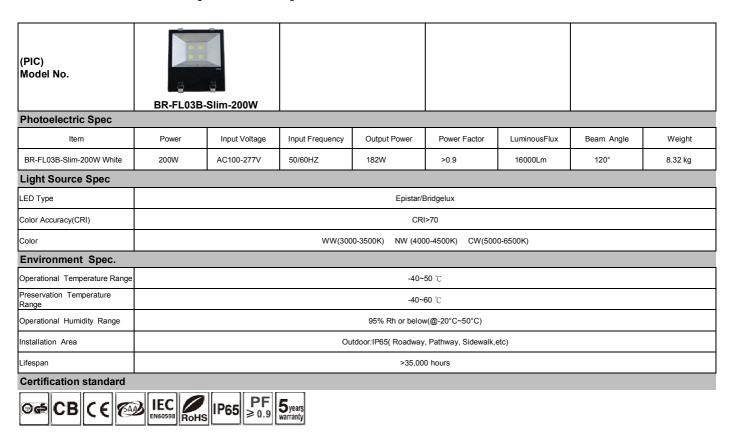

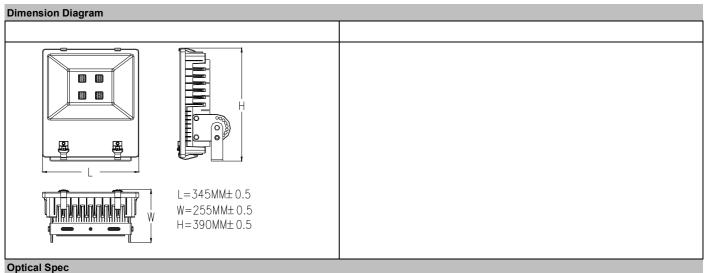


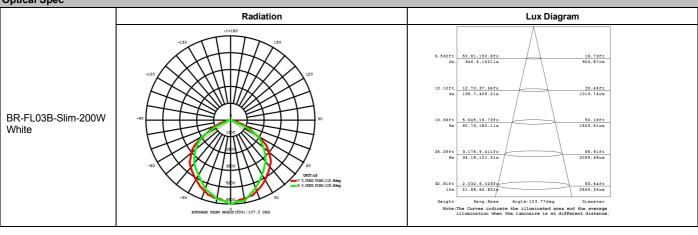




Installation and use

1.Install the LED Floodlight onto the wall or ground,punch hole on the wall orground,prepare the expansion screw,and then fasten the floodlight . First,adujust the angle you need,finally fasten the floodlights with screws

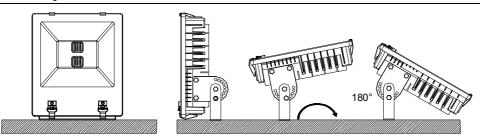

2.Connect the power wire from the Main lineto the power wire of the lamp, and then make treatment for water reistance. Pls note that the Brown color wire is Live wire, Blue wire is Null line, the yellow and green wire is Earth line. 3. Turn on the power supply to ensuer the light is working, Installed.

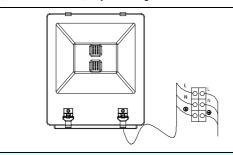

Attention

- 1. Please turn off the power supply befor installation or changing assembly parts.
- 2. The input voltage and the lamp should be adapted. After connecting the power line, please make sure the wiring section is insulated.
- 3.Non-professionals, must not install or dismantle the lamps.
- 4.All the floodlights during installation and in use should not be put with glass cover vertically upside


Packing Spec

Item	Вох			Carton		
	Measurement (mm)	Gross weight	Pcs/box	Measurement(mm)	Gross weight	Pcs/carton
BR-FL03B-Slim-200W	L470*W430*H260	10.43 kg	1	L500*W450*H560	22.2 kg	2

Remarks:

- 1.White light series: WW (3000-3500K) NW (4000-4500K) CW (5000-6500K)
- 2.Luminous flux tolerance for ±10%
- 3. Products shall be subject to any changes without prior notices.

Light attenuation map

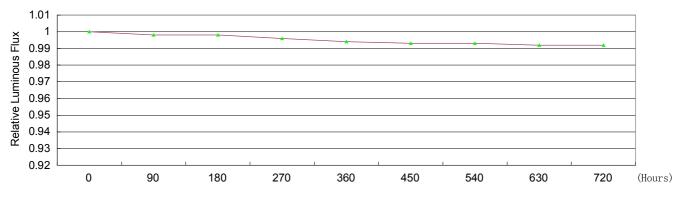

Through the 720H accelerated aging test, high and low temperature prediction in the rated under the working conditions after 35000H, will provide an average 70% optic maintenance ratio(L70).