

FOOTREST/BRAKE ADJUSTMENT

FOOTREST ADJUSTMENT



1. Footrest in sitting position.




2. Pull out the pull handle below the seat, footrest can be lengthened.



3. Footrest in full lying position.

BRAKE ADJUSTMENT

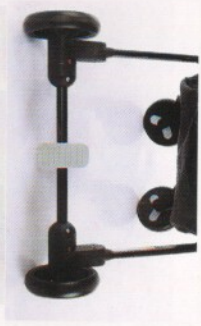

4. Brake is locked when bilateral holes shown red.



5. Brake is unlocked when step the button forward and holes shown green.