



ITA

1. Nel caso di ventilatore alimentato direttamente da rete, inserire il cavo del neutro del ventilatore generale nel foro della TAM (vedi figura); nel caso di ventilatore gestito con controllo di velocità, inserire una delle tre fasi (carico bilanciato).
2. Posizionare il ponticello nella posizione corretta, come indicato nella tab. 1.

Posizione ponticello	Minima corrente rilevabile sul filo
100	50 mA
300	100 mA
500	200 mA
700	500 mA

Tab. 1

ENG

1. *In the case of fan powered directly, insert the neutral cable of the general fan into the TAM hole (see picture); in the case of fan controlled by speed regulator, insert one of three phases (balanced load);*
2. *Place the jumper in the correct position, as shown in tab. 1.*

Jumper position	Min current value detectable on the wire
100	50 mA
300	100 mA
500	200 mA
700	500 mA

Tab. 1

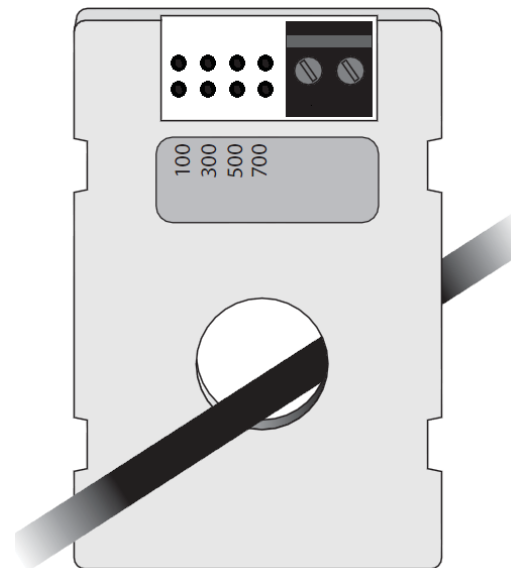


Fig. 1

CAREL si riserva la possibilità di apportare modifiche o cambiamenti ai propri prodotti senza alcun preavviso.

CAREL reserves the right to modify the features of its products without prior notice.