

АЙНО

Комод №10




 **TIMBERICA**

RU Инструкция по сборке

EN Assembly instruction


FI Koontaohje



1006
72



1008
30



1004
20




1096
48




1097
24




1028
24

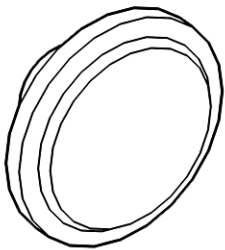


1074
9








1038
20

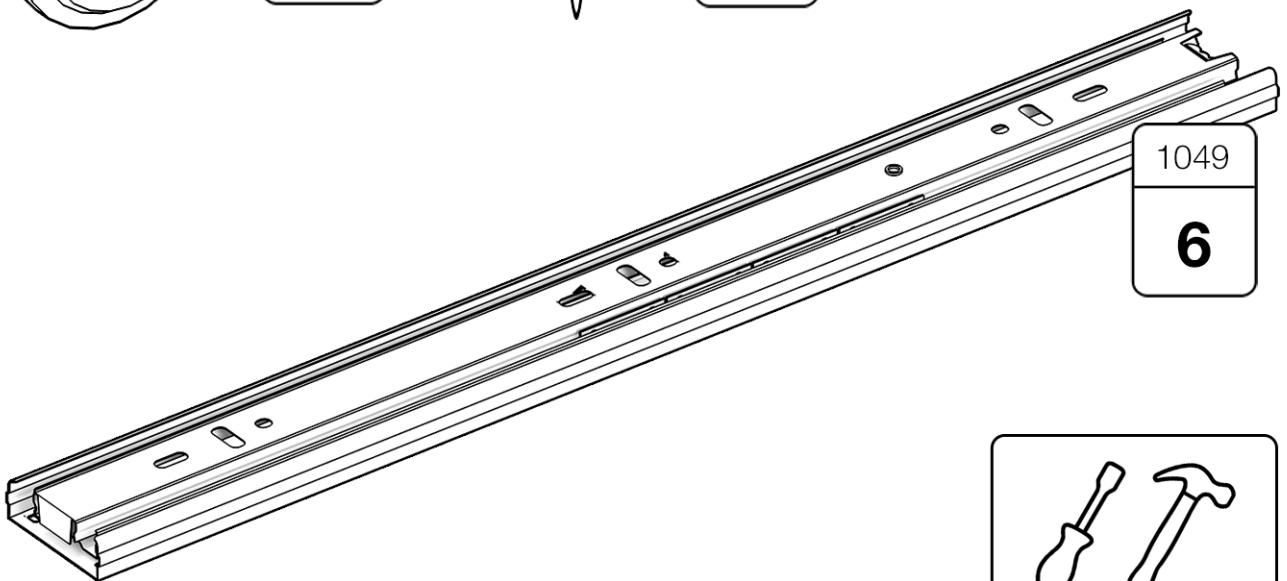



1049
6

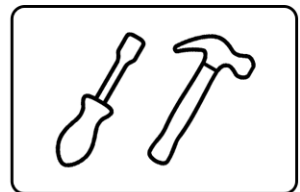


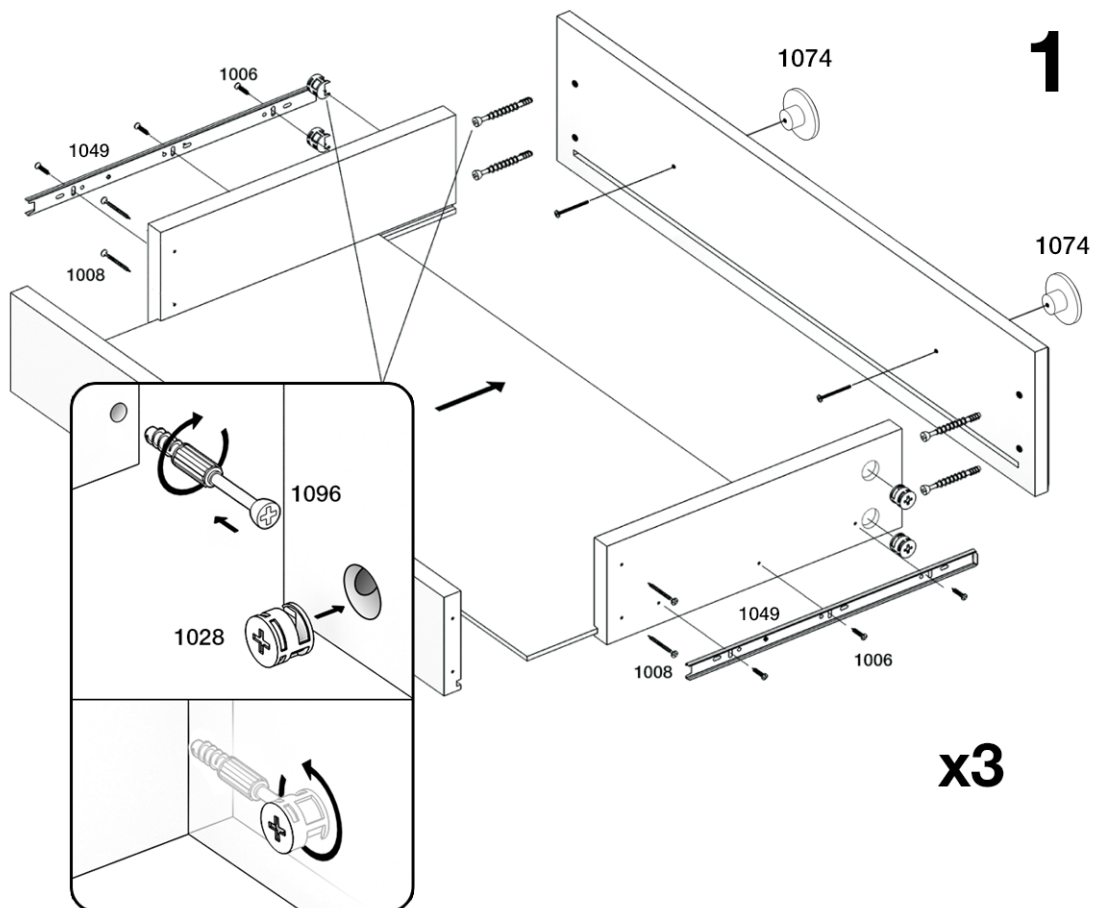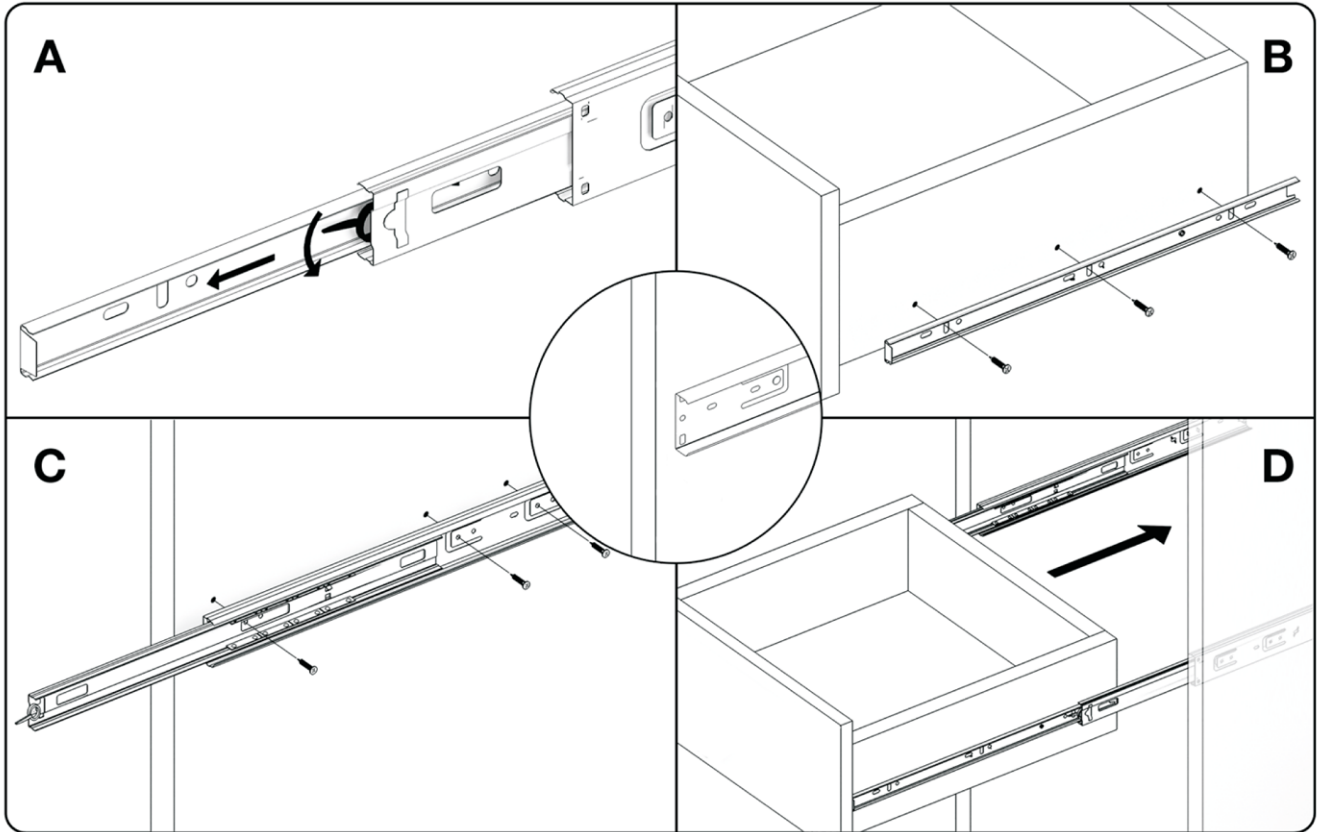

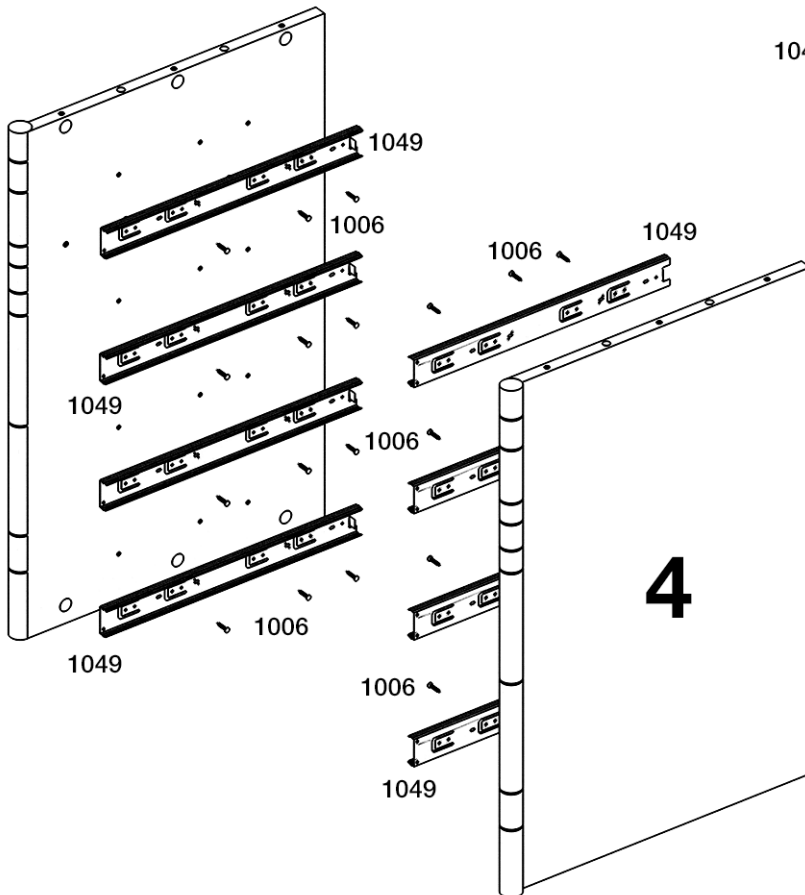
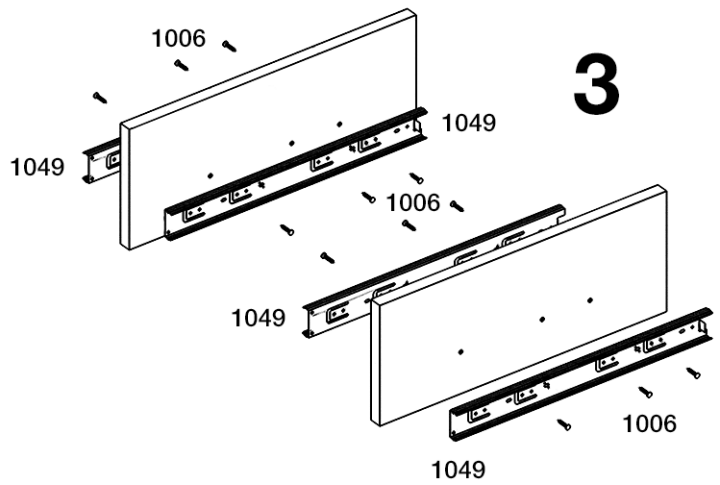
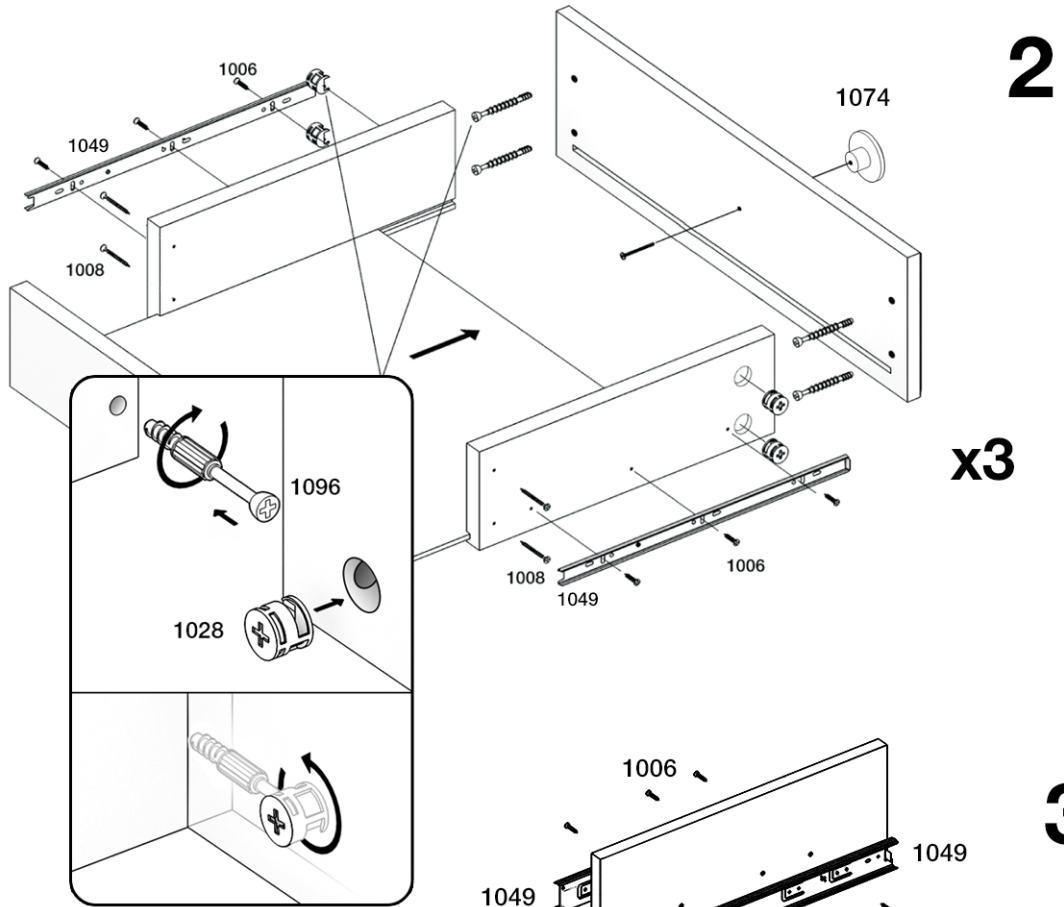


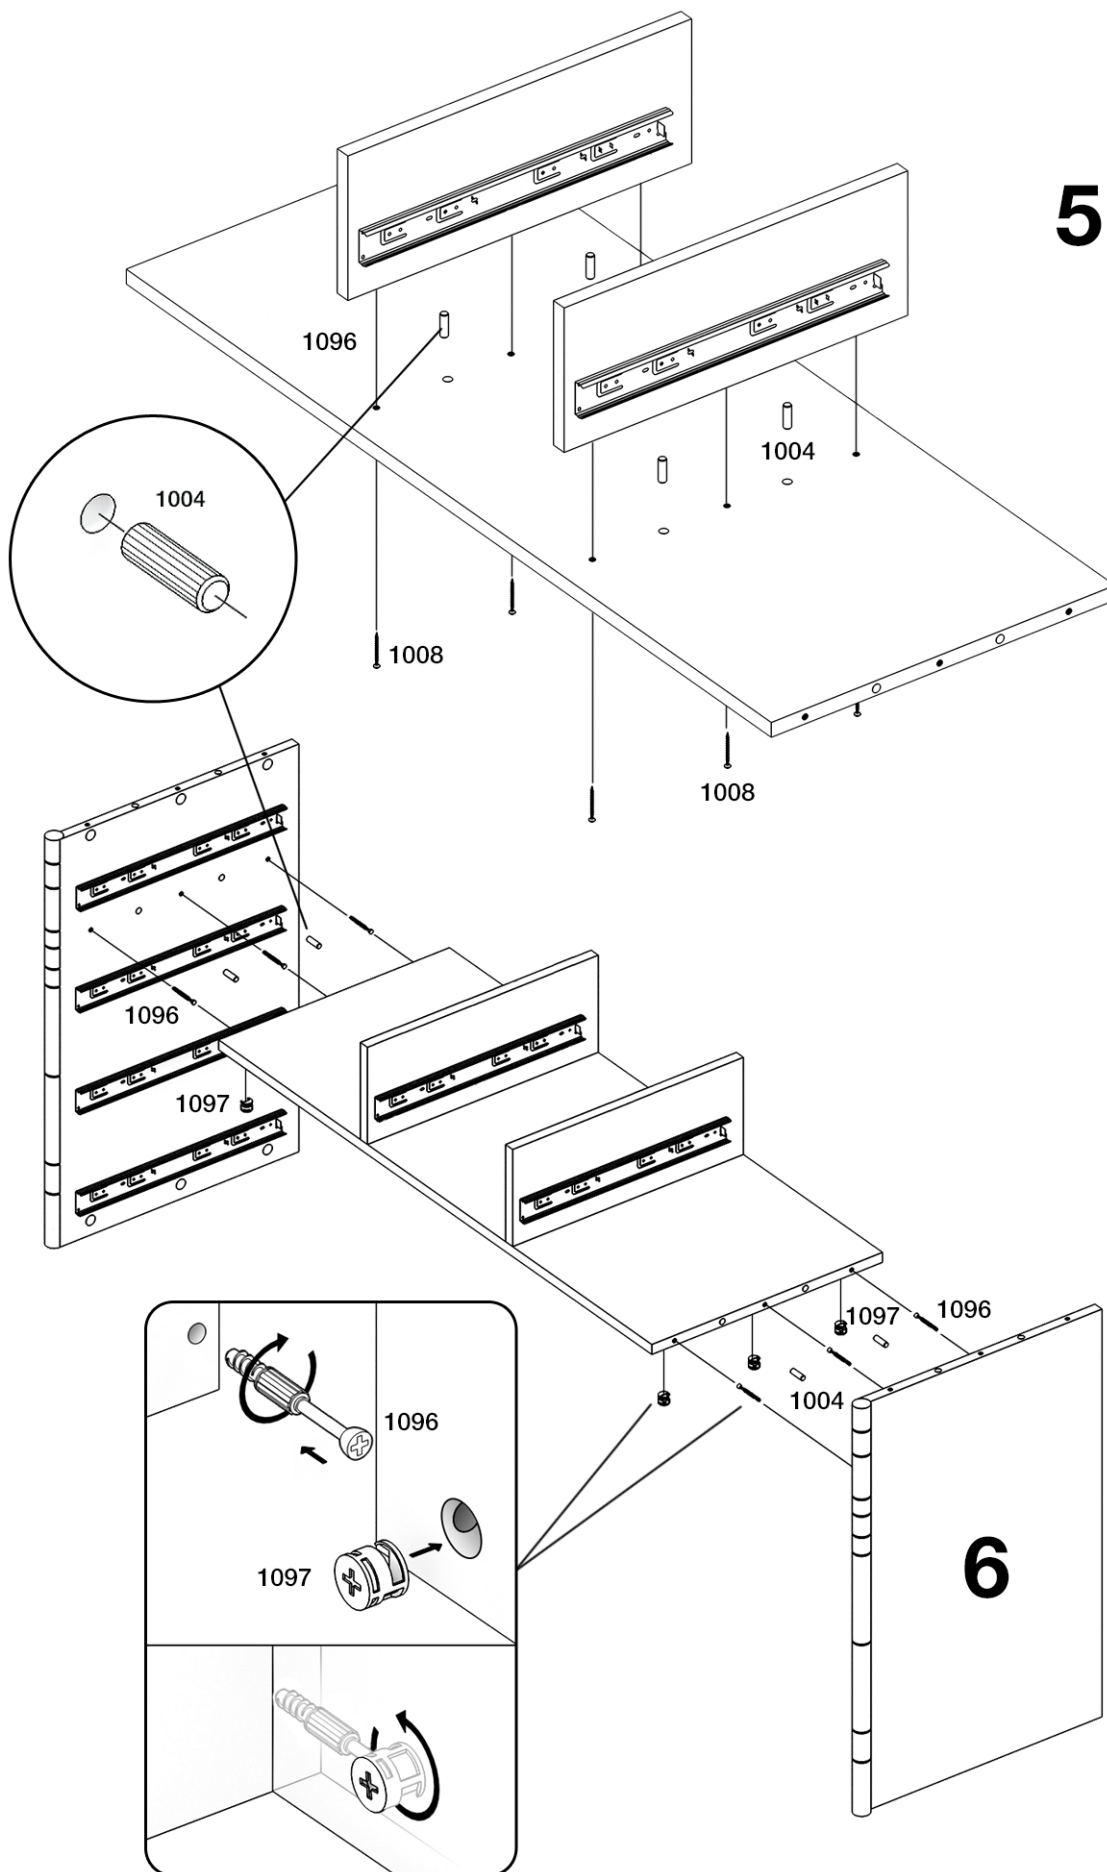

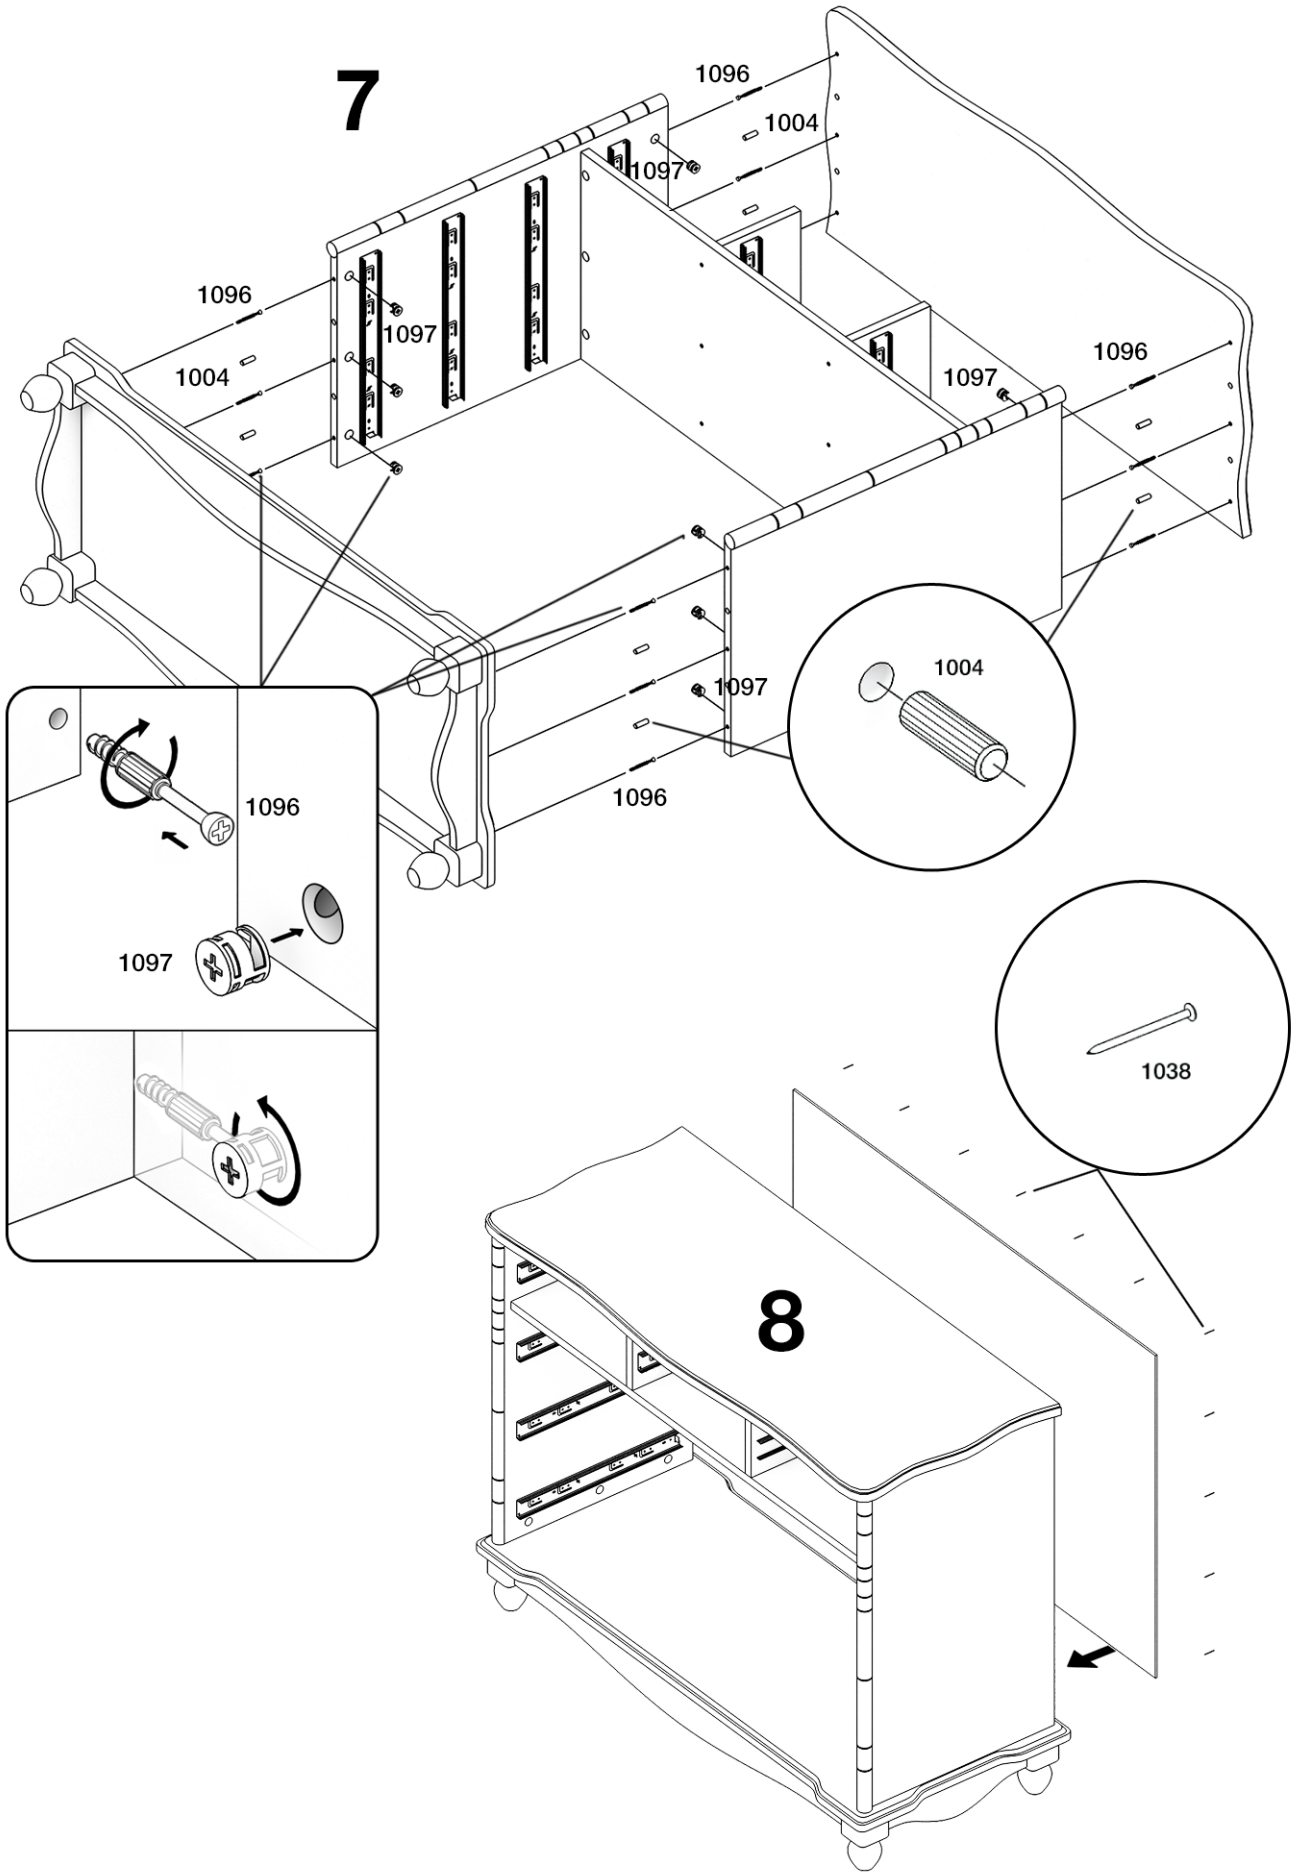

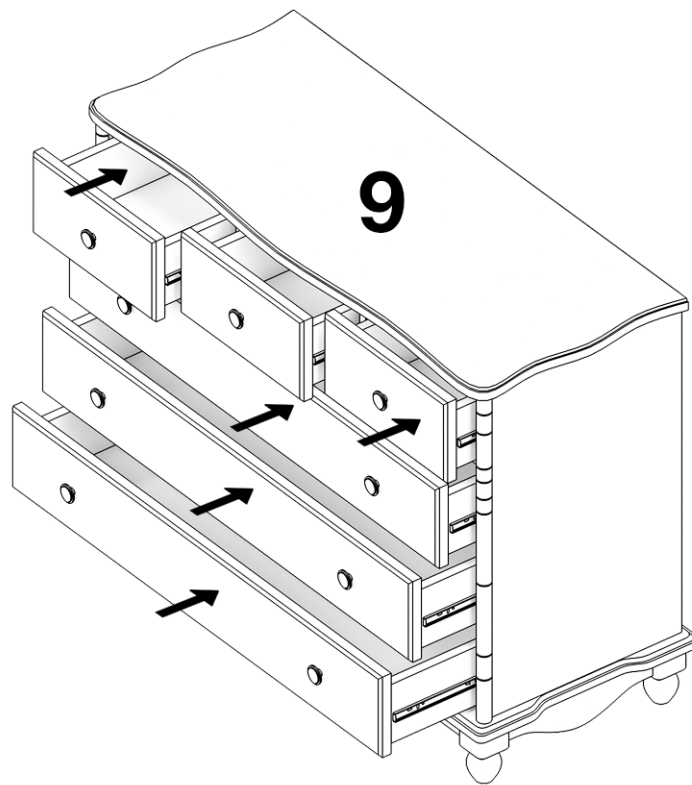

x3

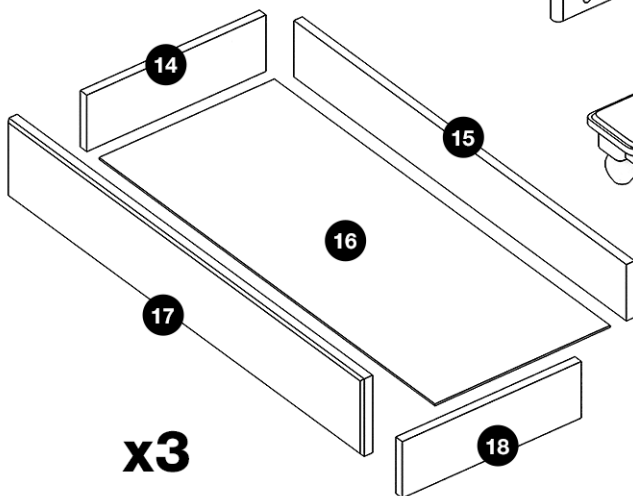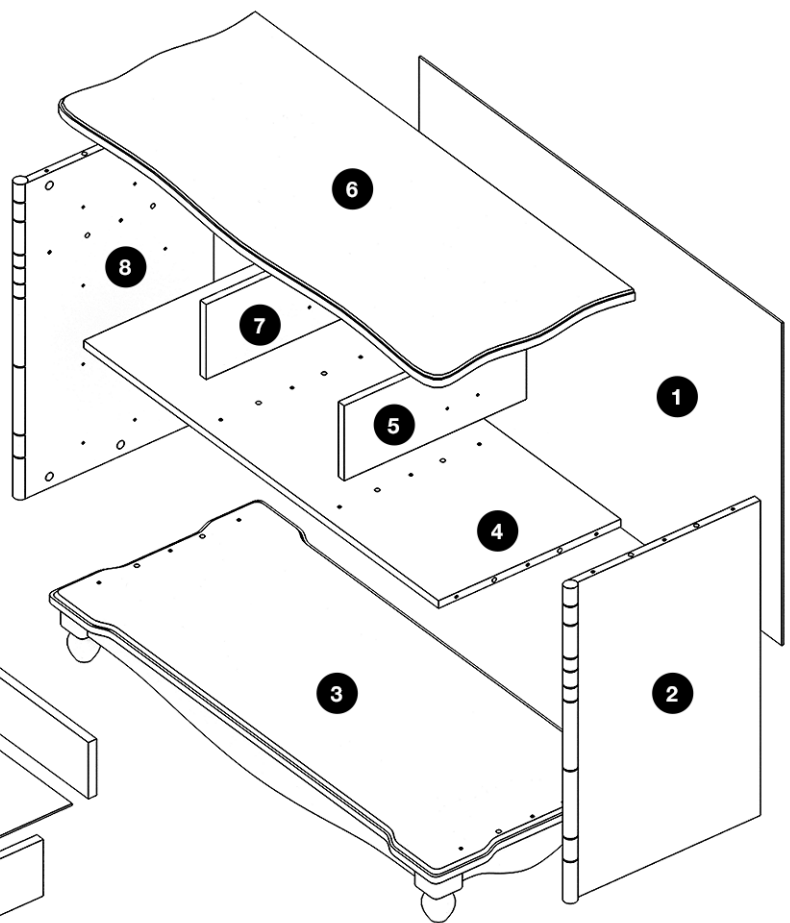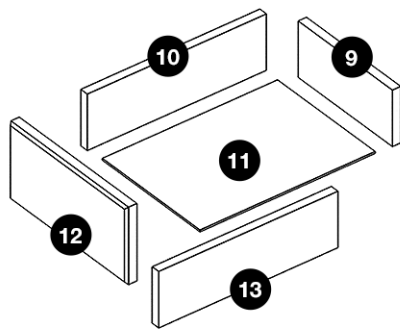

x3