



WARNING: separate as much as possible the probe and digital input signal cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel wiring) and signal cables in the same conduits.

Dimensions (mm)

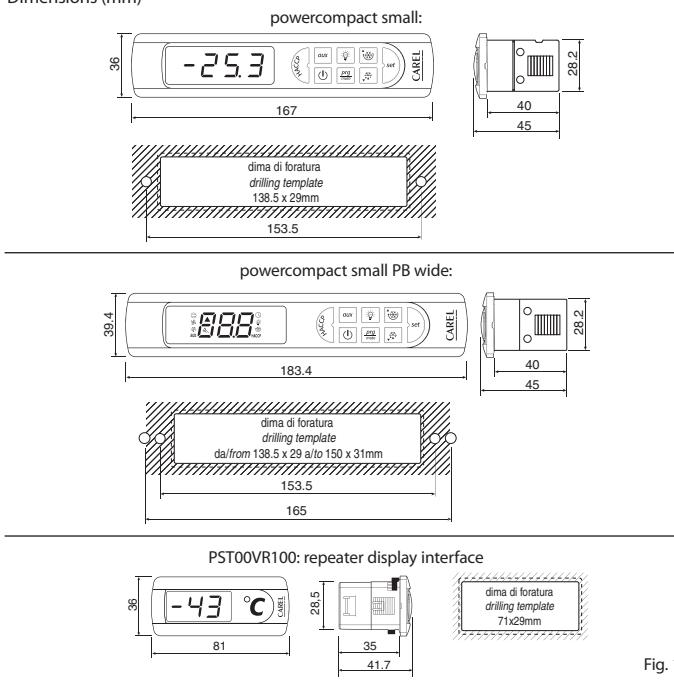


Fig. 1

Panel mounting

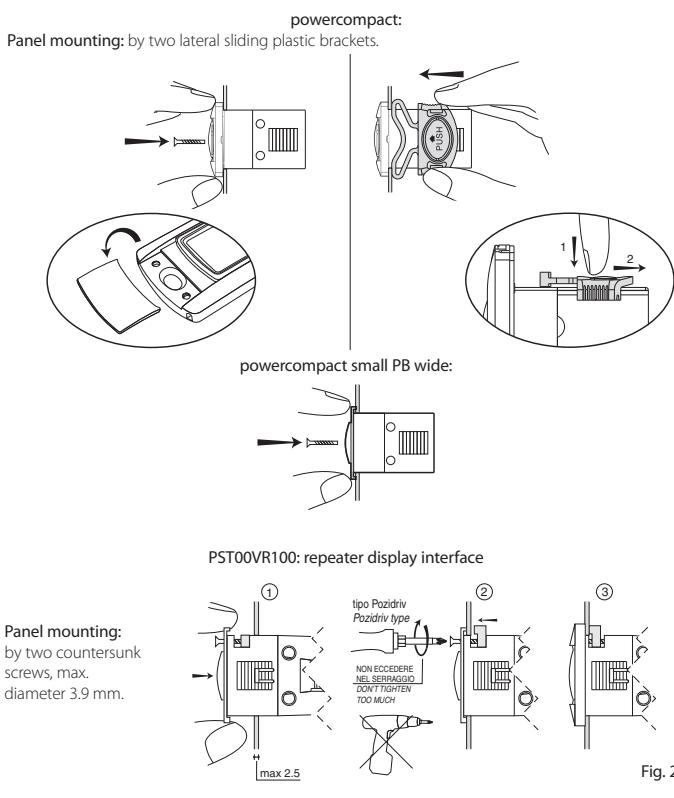


Fig. 2

Wiring diagrams

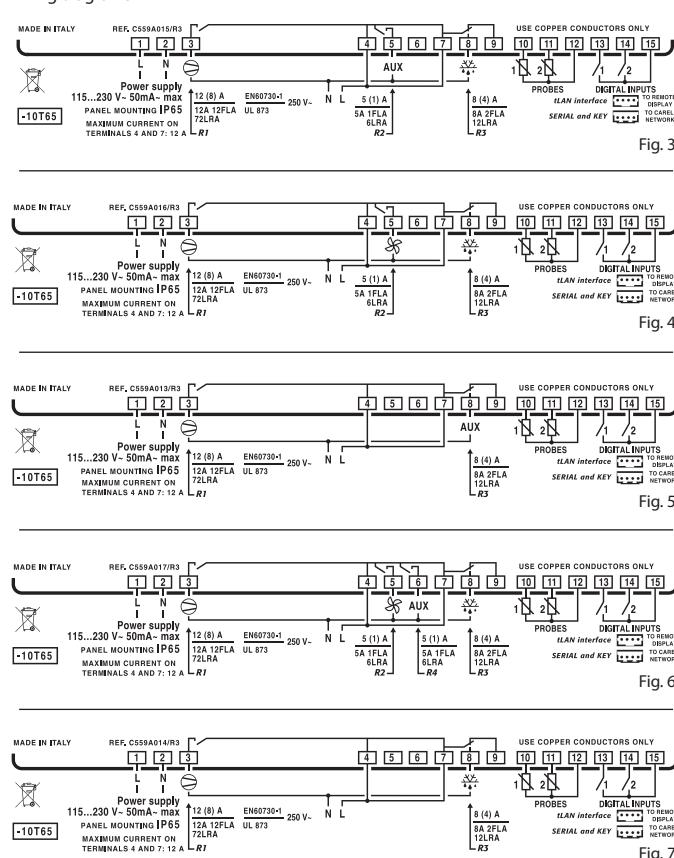


Fig. 7

Option codes

CODE	DESCRIPTION
IRTRRES000	small remote control
IROPZ48500	RS485 serial interface
IROPZD500	RS485 serial board interface with automatic recognition of the polarity +/-
PST00VR100	remote repeater display
IR0RG0000	remote repeater display ir33 range green display
IR0RR0000	remote repeater display ir33 range red display
PSTCON01B0	repeater display connection cables 1,5 m
PSTCON03B0	repeater display connection cables 3 m
PSTCON05B0	repeater display connection cables 5 m
PSOPZKEY00	parameter programming key with extended memory and 12V batteries included
PSOPZKEYA0	parameter programming key with 230 Vac power supply
IROPZKEY00	parameter programming key with 12V battery included
IROPZKEYA0	parameter programming key with extended memory and external 230 Vac power supply
VPMSTDK10	key programming kit

Tab.1

Display

powercompact uses a built-in display terminal with three LED digits and icon, to display the operating status. An additional display can be connected to the powercompact controller, via a suitable interface for example to display the reading of a third probe.

Signals on the display

Icon	Function	Normal operation			Start up
		ON	OFF	blink	
	COMPRESS.	compressor ON	compressor OFF	compressor request	
	FAN	fan ON	fan OFF	fan request	
	DEFROST	defrost ON	defrost OFF	defrost request	
	AUX	auxiliary output AUX active	auxiliary output AUX not active	anti-sweat heater function active	
	ALARM	delayed external alarm (before the expiry of the time 'A7')	no alarm present	alarms in normal operation (e.g. high/low temperature) or alarm from external digital input, immediate or delayed	
	CLOCK	if at least 1 timed defrost has been set	no timed defrost is	clock alarm present	ON if real time clock present
	LIGHT	auxiliary output LIGHT active	auxiliary output LIGHT not active	anti-sweat heater function active	
	SERVICE			malfunction (e.g. EEPROM error or probe fault)	
	HACCP	HACCP function enabled	HACCP function not enabled	HACCP alarm (HA and/or HF)	
	CONTINUOUS CYCLE	CONTINUOUS CYCLE enabled	CONTINUOUS CYCLE not enabled	CONTINUOUS CYCLE request	

Tab.2

The blinking status indicates a request for activation that cannot be implemented until the end of the corresponding delay times.

Buttons on the keypad

Icon	Button	Normal operation		Start-up	Request automatic assignment
		Pressing the button alone other	Pressing together with buttons address		
		enters the menu to display and delete the HACCP alarms			
	ON/OFF	if pressed for more than 5 s, switches the unit on/off			
	PRG/MUTE	<ul style="list-style-type: none"> • SET: if pressed for more than 5 s together with the SET button accesses the menu for setting type "F" (frequent) parameters in the event of alarm: silences the audible alarm (buzzer) and disables the alarm relay • UP/CC: if pressed for more than 5 s together with the UP/CC button, resets any active alarms with manual reset 	<ul style="list-style-type: none"> • if pressed for more than 5 s at start-up, enables the procedure for setting the default values • if pressed for more than 1 s, enters the automatic serial address assignment procedure 		
	UP/CC	<ul style="list-style-type: none"> • if pressed for more than 5 s, enables/disables continuous cycle operation • PRG/MUTE: if pressed for more than 5 s together with the PRG/MUTE button, resets any active alarms with manual reset 			
	LUCE	if pressed for more than 1 s, enables/disables auxiliary AUX2			
	AUX	if pressed for more than 1 s, enables/disables auxiliary AUX1			
	DOWN/DEF	if pressed for more than 5 s, enables/disables a manual defrost			
	SET	<ul style="list-style-type: none"> • PRG/MUTE: if pressed for more than 5 s together with the PRG/MUTE button accesses the menu for setting the type "C" (configuration) or downloading the parameters • UP/CC: if pressed for more than 5 s together with the UP/CC button, starts the procedure for printing the reports (function available, with management to be implemented) • if pressed for more than 1 s, displays or sets the set point 			

Tab.3

Setting the set point (desired temperature value)

To display or set the set point, proceed as follows:

1. press the "set" button for more than 1 second to display the set point;
2. increase or decrease the value of the set point, using the and buttons respectively, until reaching the desired value;
3. press the "set" button again to confirm the new value.

Alarms with manual reset

The alarms with manual reset can be reset by pressing the and buttons together for more than 5 s.

Manual defrost

As well as the automatic defrost function, a manual defrost can be enabled, if the temperature conditions allow, by pressing for 5 seconds.

ON/OFF button

Pressing this button for 5 s switches the unit on/off. When the controller is turned off, it actually goes into standby, and therefore, when carrying out maintenance on the device, it must be disconnected from the power supply.

HACCP function

powercompact is compliant with the HACCP standards in force since it allows the monitoring of the temperature of the stored food. "HA" alarm = exceeded maximum threshold: up to three HA events are saved (HA1, HA2, HA3) respectively from the more recent (HA) to the oldest (HA2) and a HA signal that displays the number of occurred HA events. "HF" alarm = power failure lasting over a minute and exceeded AH maximum threshold: up to three HF events are saved (HF, HF1, HF2) respectively from the more recent (HF) to the oldest (HF2) and a HF signal that displays the number of occurred HF events. HA/HF alarm setting: AH parameter (high temperature threshold); Ad and Htd (Ad+Htd = HACCP alarm activation delay). Display of the details: access to HA or HF parameters pressing the "HACCP" button and use or buttons to glance over. HACCP alarm erasing: press the "HACCP" button for more than 5 s, the message "res" indicates that the alarm have been deleted. To cancel the saved alarms press the "HACCP" and buttons for more than 5 s.

Continuous cycle

Pressing the button for more than 5 seconds enables the continuous cycle function. During operation in continuous cycle, the compressor continues to operate for the time 'cc' and it stops when reaches the 'cc' time out or the minimum temperature envisaged (AL = minimum temperature alarm threshold). Continuous cycle setting: "cc" parameter (continuous cycle duration): "cc" = 0 never active; "cc" parameter (bypassing the alarm after the continuous cycle): it avoids or delays the low temperature alarm after the continuous cycle.

Procedure for setting the default parameter values

To set the default parameter values on the controller, proceed as follows:

- If "Hdn" > 0: 1: switch the instrument off; 2: switch the instrument back on, holding the button until the value 0 is shown on the display; 3: select the set of default parameters, between 0 and "Hdn", using the and buttons;
- 4. press the button until the message "Std" is shown on the display

• If "Hdn" < 0: 1: switch the instrument off; 2: switch the instrument back on, holding the button until the value 0 is shown on the display; 3: select the set of default parameters, between 0 and "Hdn", using the and buttons;

- 4. press the button until the message "Std" is shown on the display

Automatic assignment of the serial address

This is a special procedure that, using an application installed on a PC, allows setting and managing simply the addresses of all instruments (featuring this function) connected to the CAREL network. The procedure is very simple:

1. Using the remote application. The "Network definition" procedure started; the application sends a special message "<ADR>" across the CAREL network, containing the network address.
 2. Pressing the on an instrument connected to the network recognises the message sent by the remote application, automatically sets the address to the desired value and sends a confirmation message to the application, containing the unit code and firmware revision (message 'V'). When the message sent by the remote application is recognised, the instrument shows the message 'Add' on the display for 5 seconds, followed by the value of the serial address assigned.
 3. The application, on receiving the confirmation message from the units connected to the network, saves the information received in its database, increases the serial address and sends the message '<ADR>' again;
 4. At this point, the procedure starting from point 2 can be repeated on another unit connected to the network, until defining all the network addresses.
- Note: once the address has been assigned to an instrument, the operation, for safety reasons, is disabled on the same instrument for 1 minute, preventing a different address from being assigned to the instrument.

Accessing the configuration parameters (type C)

1. Press the and "set" buttons at the same time for more than 5 seconds; the display will show the number "00" (password prompt).
2. Press the or button until displaying the number "22" (parameter access password).
3. Confirm by pressing the "set" button.
4. The display shows the code of the first modifiable "C" parameter.

Accessing the configuration parameters (type F)

1. Hold the button for more than 5 s (if there are active alarms, first mute the buzzer), the display will show the first modifiable "F" parameter.

Modifying the parameters

After having displayed the parameter, either type "C" or type "F", proceed as follows:

1. Press the or button to scroll the parameters, until reaching the parameter to be modified; when scrolling, an icon appears on the display representing the category the parameter belongs to.
2. Alternatively, press the button to display a menu that is used to quickly access the category of parameters to be modified.
3. Scroll the menu with the and buttons; the display shows the codes of the various categories of parameters (see the Summary of operating parameters), accompanied by the display of the corresponding icon (if present).
4. Once having reached the desired category, press "set" to go directly to the first parameter in the chosen category (if no parameter is visible, pressing the "set" button will have no effect).
5. At this stage, modify the parameters or return to the "Categories" menu, using the button.
6. Press "set" to display the value associated with the parameter.
7. Increase or decrease the value using the or buttons respectively.
8. Press "set" to temporarily save the new value and return to the display of the parameter.
9. Repeat the operations from point 1 or point 2.
10. If the parameter has sub-parameters, press "set" to display the first sub-parameter.
11. Press the or button to display all the sub-parameters.
12. Press "set" to display the associated value.
13. Increase or decrease the value using the or button respectively.
14. Press "set" to temporarily save the new value and return to the display of the sub-parameter code.
15. Press to return to the display of the parent parameter.


Saving the new values assigned to the parameters

To definitely save the new values of the modified parameters, press the button for more than 5 seconds, thus exiting the parameter setting procedure. All the modifications made to the parameters, temporarily saved in the RAM, can be cancelled and "normal operation" resumed by not pressing any button for 60 seconds, thus allowing the parameter setting session to expire due to timeout. If the instrument is switched off before pressing the button, all the modifications made to the parameters and temporarily saved will be lost.

Directly accessing the parameters by selecting the category

The configuration parameters can also be accessed, in addition to the mode

Optional connections:

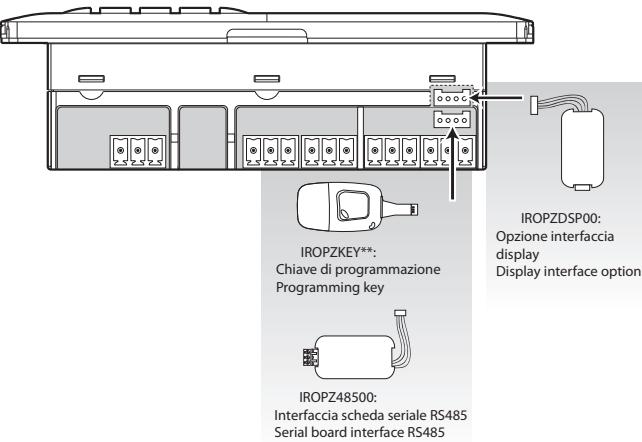

Date and day for defrost event (parameters td1...td8)

0= no event; 1...7= Monday...Sunday; 8= from Monday to Friday; 9= from Monday to Saturday; 10= from Saturday to Sunday; 1= every day.

Summary of operating parameters

UOM = Unit of measure; Def. = Default value.

Symbol	Code	Parameter	Models	UOM	Type	Min	Max	Def	
Pw	MSYF	Password	-	C	0	200	22		
/2	MSYF	Measurement stability	-	C	1	15	4		
/3	MSYF	Probe display response	-	C	0	15	0		
/4	MSYF	Virtual probe	-	C	0	100	0		
/5	MSYF	Select °C or °F	flag	C	0	1	0		
/6	MSYF	Display decimal point 0: with tenths of a degree 1: without tenths of a degree	flag	C	0	1	0		
/tl	MSYF	Display decimal point 1: virtual probe 2: probe 1 3: probe 2 4: probe 3 5: probe 4 6: probe 5 7: set point	-	C	1	7	1		
/tE	MSYF	Display on external terminal 0: remote terminal not present 1: virtual probe 2: probe 1 3: probe 2 4: probe 3 5: probe 4 6: probe 5	-	C	0	6	0		
/P	MSYF	Select type of probe 0: NTC standard with range -50T90 °C 1: NTC enhanced with range -40T150 °C 2: PTC standard with range -50T150 °C	-	C	0	2	0		
/A2	YF MS	Configuration of probe 2 (S2) 0: Probe absent 1: Product probe (display only) 2: Defrost probe 3: Condenser probe 4: Antifreeze probe	-	C	0	4	2		
/A3	MSYF	Configuration of probe 3 (S3, D1) As for /A2	-	C	0	3	0		
/A4	MSYF	Configuration of probe 4 (S4, D2) As for /A2	-	C	0	3	0		
/A5	MSYF	Configuration of probe 5 (S5, D3) As for /A2	-	C	0	3	0		
/c1	MSYF	Calibration of probe 1	°C/F	F	-20	20	0.0		
/c2	MSYF	Calibration of probe 2	°C/F	F	-20	20	0.0		
/c3	MSYF	Calibration of probe 3	°C/F	F	-20	20	0.0		
/c4	MSYF	Calibration of probe 4	°C/F	F	-20	20	0.0		
S1	MSYF	St. Temperature set point	°C/F	F	r1	r2	0.0		
S2	MSYF	rd. Control delta	°C/F	F	0.1	20	2.0		
D11/S3	MSYF	rn. Dead band	°C/F	F	0.0	60	4.0		
Inputs	MSYF	rr. Reverse differential for control with dead band	°C/F	F	0.1	20	2.0		
D12 / S4	MSYF	r1. Minimum set point allowed	°C/F	F	-50	r2	-50		
	MSYF	r2. Maximum set point allowed	°C/F	F	r1	200	60		
	SYF	r3. Operating mode	flag	C	0	2	0		
Probe type		1: Direct (cooling) with defrost control 2: Direct (cooling) 3: Reverse-cycle (heating)							
Std. CAREL NTC	MSYF	r4. Automatic night-time set point variation	°C/F	F	-20	20	3.0		
Std. CAREL PTC (specific model)	MSYF	r5. Enable temperature monitoring	flag	C	0	1	0		
		0: Disabled 1: Enabled							
	MSYF	rt. Temperature monitoring interval	ore	F	0	999	-		
	MSYF	r6. Maximum temperature read	°C/F	F	-	-	-		
	MSYF	r7. Minimum temperature read	°C/F	F	-	-	-		
	SYF	c0. Comp., fan and AUX delay on start-up in	min	C	0	15	0		
	SYF	c1. Minimum time between successive starts	min	C	0	15	0		
	SYF	c2. Minimum compressor OFF time	min	C	0	15	0		
	SYF	c3. Minimum compressor ON time	min	C	0	15	0		
	SYF	c4. Duty setting	min	C	0	100	0		
	SYF	c5. Continuous cycle duration	ore	C	0	15	0		
	SYF	c6. Alarm bypass after continuous cycle	ore	C	0	250	2		
	SYF	c7. Maximum pump down time	s	C	0	900	5		
	SYF	c8. Comp. start delay after open PD valve (factory default=0, not visible from display)	s	C	0	60	5		
	SYF	c9. Enable autostart function in PD	flag	C	0	1	0		
	SYF	c10. Select Pump down by time or pressure	flag	C	0	1	0		
	SYF	c11. 0: Pump down by pressure 1: Pump down by time	s	C	0	250	4		
	SYF	d0. Type of defrost SYF	flag	C	0	4	0		
		0: Electric heater defrost by temperature 1: Hot gas defrost by temperature 2: Electric heater defrost by time 3: Hot gas defrost by time 4: Electric heater defrost thermostat by time							
	SYF	d1. Interval between defrosts	ore	F	0	250	8		
	SYF	d11. End defrost temperature, evaporator	°C/F	F	-50	200	4.0		
	SYF	d12. End defrost temperature, aux evap.	°C/F	F	-50	200	4.0		
	SYF	d2. Maximum defrost duration, evaporator	min	F	1	250	30		
	SYF	d22. Maximum defrost duration, aux evap	min	F	1	250	30		
	SYF	d3. Defrost start delay	min	C	0	250	0		
	SYF	d4. Enable defrost on start-up	flag	C	0	1	0		
		0: No defrost is performed when the instrument is switched on 1: A defrost is performed when the instrument is switched on							
	SYF	d5. Defrost delay on start-up	min	C	0	250	0		
	SYF	d6. Display on hold during defrost	-	C	0	2	1		
		0: Alternating display of dEF and probe value 1: Display of the last temp. shown 2: Display of dEF steady							
	SYF	dd. Dripping time after defrost	min	F	0	15	2		
	SYF	d8. Alarm bypass after defrost	ore	F	0	250	1		
	SYF	d8d. Alarm bypass after door open	min	C	0	250	0		
	SYF	d9. Defrost priority over compressor protectors	flag	C	0	1	0		
		0: The protection times c1, c2 and c3 are observed 1: The protection times c1, c2 and c3 are not observed							
	SYF	d1. Display of defrost probe 1	min	F	-	-	-		
	SYF	d2. Display of defrost probe 2	min	F	-	-	-		
	SYF	d3. Time base for defrost	flag	C	0	1	0		
		0: d1 in hours, dP1 and dP2 in minutes 1: d1 in minutes, dP1 and dP2 in seconds							
	SYF	d10. Compressor running time	ore	C	0	250	0		
	SYF	d11. Running time temperature threshold	°C/F	F	-20	20	1.0		
	SYF	d12. Advanced defrost	-	C	0	3	0		
	SYF	d13. Nominal defrost duration	-	C	1	100	65		
	SYF	d14. Proportional factor, variation in dI	-	C	0	100	50		
	MSYF	A1. Type of threshold 'AL' and 'AH'	°C/F	C	0.1	20	2.0		
		0: AL and AH are relative thresholds to the set point 1: AL and AH are absolute thresholds							
	MSYF	A1. Low temperature alarm threshold	°C/F	F	-50	200	0.0		
	MSYF	AH. High temperature alarm threshold	°C/F	F	-50	200	0.0		
	MSYF	A2. Low and high temperature signal delay	min	F	0	250	120		
	A4	Digital input 1 configuration	MYSF M	-	C	0	14	0	
		0: Input not active 1: Immediate external alarm							
		2: Delayed external alarm 3: Enable defrost (model M probe selection)							
		4: Start defrost with compressor and fan stop							
		6: Remote on/off 7: Curtain switch							
		8: Low pressure switch with fan stop only							
		10: Direct/reverse							
		11: Light sensor							
		12: Activation of the door switch with compressor and fans off and light not managed							
		14: Door switch with fans only off and light not managed							
	A5	Digital input 2 configuration (D12) - As for A4	-	C	0	14	0		
	A6	Stop compressor from external alarm	SYF	min	C	0	100	0	
	A7	External alarm detection delay	SYF	min	C	0	250	0	
	A8	Enable alarms Ed1 and Ed2	SYF	flag	C	0	1	0	
		0: Alarm signals Ed1 and Ed2 disabled 1: Alarm signals Ed1 and Ed2 enabled							
	A9	Light management mode with door switch	SYF	flag	C	0	1	0	
	Ae	High condenser temperature alarm	SYF	°C/F	C	0.0	200	70.0	
	AeH	High condenser temperature alarm differential	SYF	°C/F	C	0.1	20	10	
	AeF	High condenser temperature alarm delay	SYF	min	C	0	250	0	
	Af	Light sensor OFF time	SYF	s	C	0	250	0	
	ALF	Antifreeze alarm threshold	MSYF	°C/F	C	-50	200	-5.0	
	AdF	Antifreeze alarm delay	MSYF	min	C	0	15	1	
	F0	Fan management	F	flag	C	0	2	0	
		0: Fans always on 1: Fans controlled according to the temperature difference between the virtual control probe and the evaporator temperature							
	F1	Fan start temperature	F	°C/F	F	-50	200	5.0	
	F2	Fan OFF with compressor OFF	F	°C/F	F	0	1	1	
		0: Fans always on 1: Fans off with compressor off							
	F3	Fans in defrost	F	flag	C	0	1	1	
		0: Fans operate during defrosts 1: Fans do not operate during defrosts							
	Fd	Fan OFF after dripping	F	min	F	0	15	1	
	F4	Condenser fan stop temperature	MSYF	°C/F	C	-50	200	40	
	F5	Condenser fan start differential	MSYF	°C/F	C	0.1	20	5.0	

<tbl